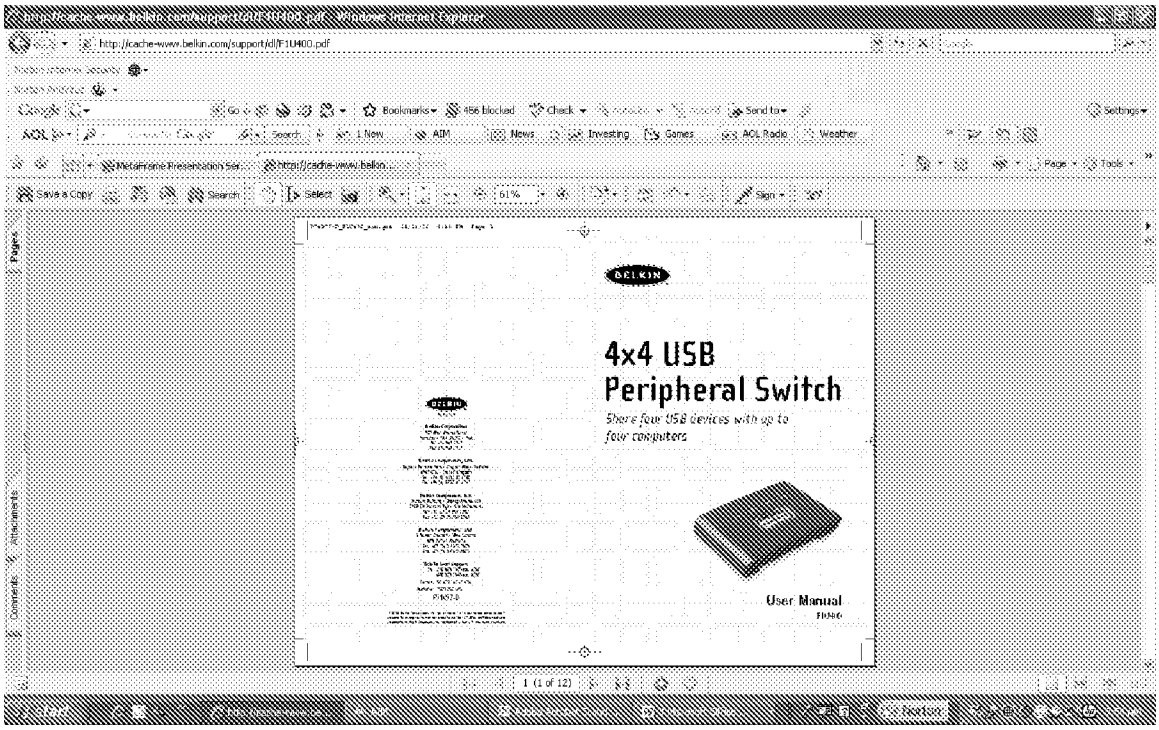
http://cache-www.belkin.com/support/dl/F1U400.pdf
Bookmarks
456 blocked
Check
Send to
Settings
Search
1 New
AIM
News
Investing
Games
AOL Radio
Weather
Page
Tools
Save a Copy
Search
Select
61%
Sign
Pages
Attachments
Comments
BELKIN
4x4 USB
Peripheral Switch
Share four USB devices with up to
four computers
User Manual
F1U400
1 (1 of 12)
Norton

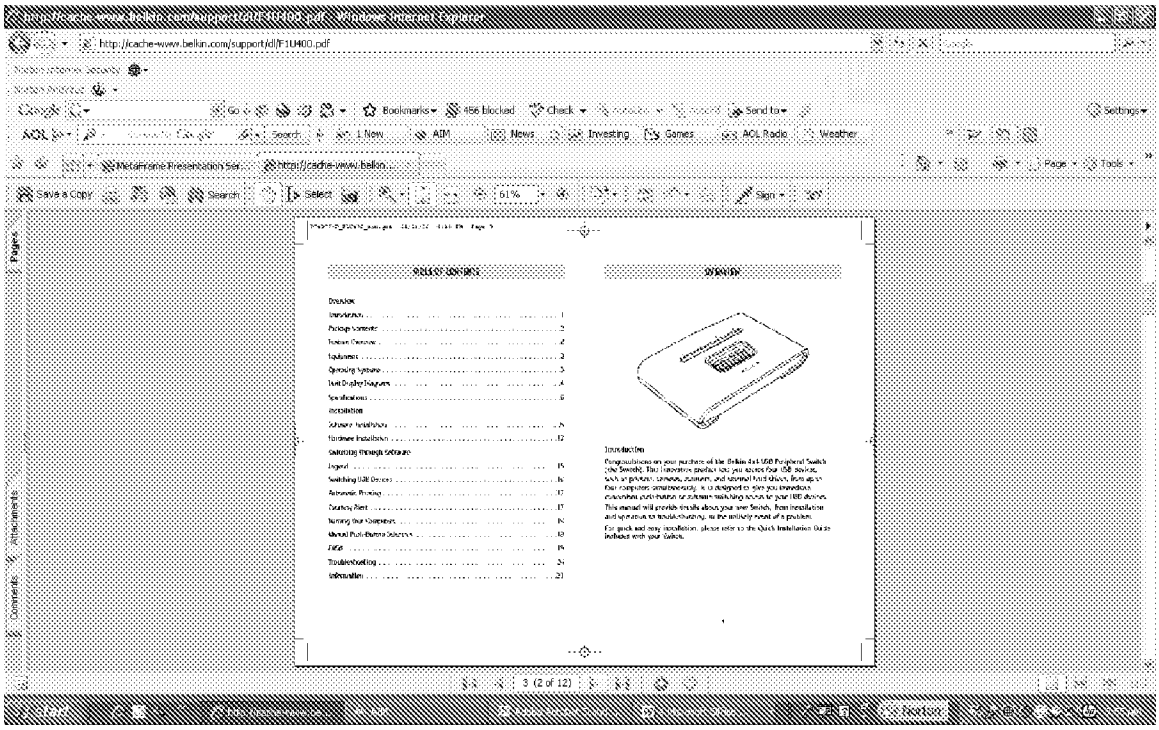
http://cache-www.belkin.com/support/dl/F1U400.pdf
Table of Contents
Introduction
Package Contents
Product Overview
Requirements
Operating Systems
Front & Side Diagrams
Specifications
Installation
Software Installation
Hardware Installation
Switching through Software
Legend
Switching USB Devices
Automatic Pairing
Status Alert
Naming Your Computers
Manual Port-Button Selection
FAQs
Troubleshooting
Information
Introduction
Introduction
Congratulations on your purchase of the Belkin 4x1 USB Peripheral Switch (the Switch). This innovative product lets you access four USB devices, such as printers, cameras, scanners, and external hard drives, from up to four computers simultaneously. It is designed to give you maximum productivity with minimum or automatic switching access to your USB devices. This manual will provide details about your new Switch, from installation and operation to troubleshooting, in the unlikely event of a problem.
For quick and easy installation, please refer to the Quick Installation Guide included with your Switch.
3 (2 of 12)

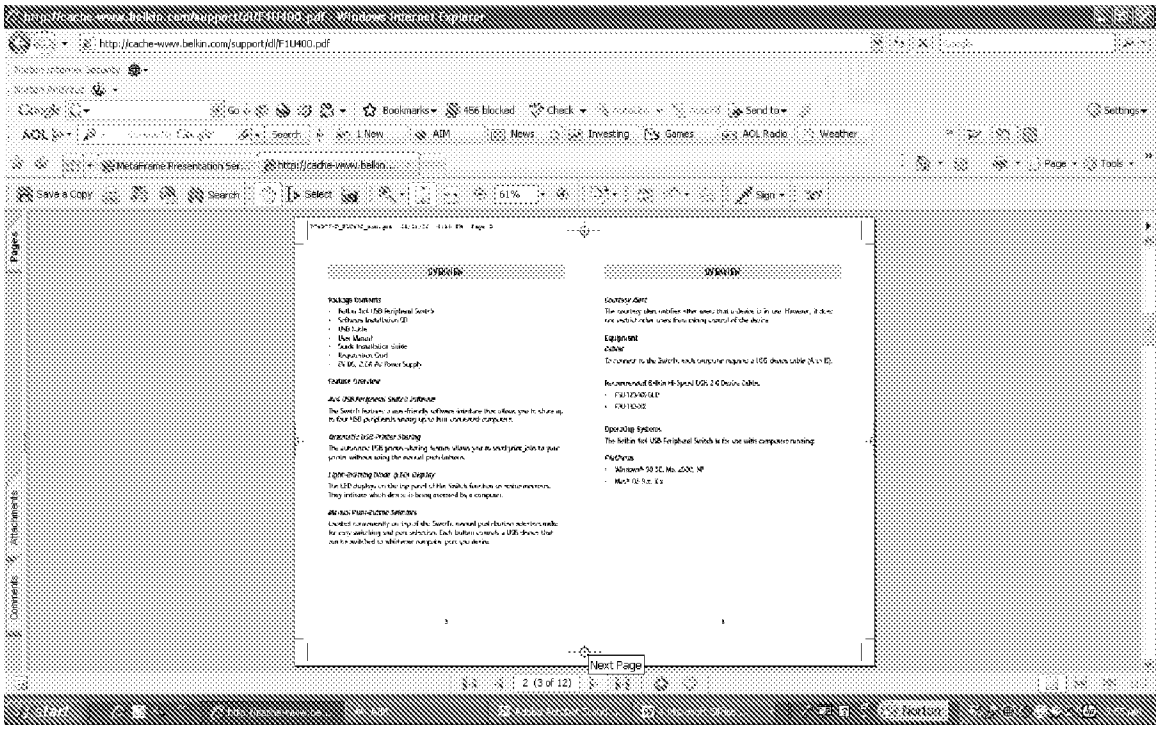
http://cache-www.belkin.com/support/dl/F1U400.pdf
Bookmarks
456 blocked
Check
Send to
Settings
Search
1 New
AIM
News
Investing
Games
AOL Radio
Weather
Page
Tools
Save a Copy
Search
Select
61%
Sign
Pages
Attachments
Comments
OVERVIEW
Package Contents
Belkin 4-Port USB Peripheral Switch
Software Installation CD
USB Cable
User Manual
Quick Installation Guide
Registration Card
5V DC, 2.5A AC Power Supply
Feature Overview
Auto USB Peripherals Switch Software
The Switch features a user-friendly software interface that allows you to share up to four USB peripherals among up to four connected computers.
Automatic USB Printer Sharing
The automatic USB printer-sharing feature allows you to send print jobs to your printer without using the manual push-buttons.
Light-Emitting Diode (LED) Display
The LED displays on the top panel of the Switch function as status indicators. They indicate which device is being accessed by a computer.
Manual Push-Button Selection
Located conveniently on top of the Switch, manual push-button selectors make for easy switching and port selection. Each button controls a USB device that can be switched to whichever computer you desire.
3
OVERVIEW
Courtesy Alert
The courtesy alert notifies other users that a device is in use. However, it does not restrict other users from taking control of the device.
Equipment
Cables
To connect to the Switch, each computer requires a USB device cable (A-to-B).
Recommended Belkin Hi-Speed USB 2.0 Device Cables
F3U133V6.UP
F3U133V2
Operating Systems
The Belkin 4-Port USB Peripheral Switch is for use with computers running
PlatForms
Windows® 98 SE, Me, 2000, XP
Mac® OS 8.x, 9.x
4
Next Page
2 (3 of 12)
Norton

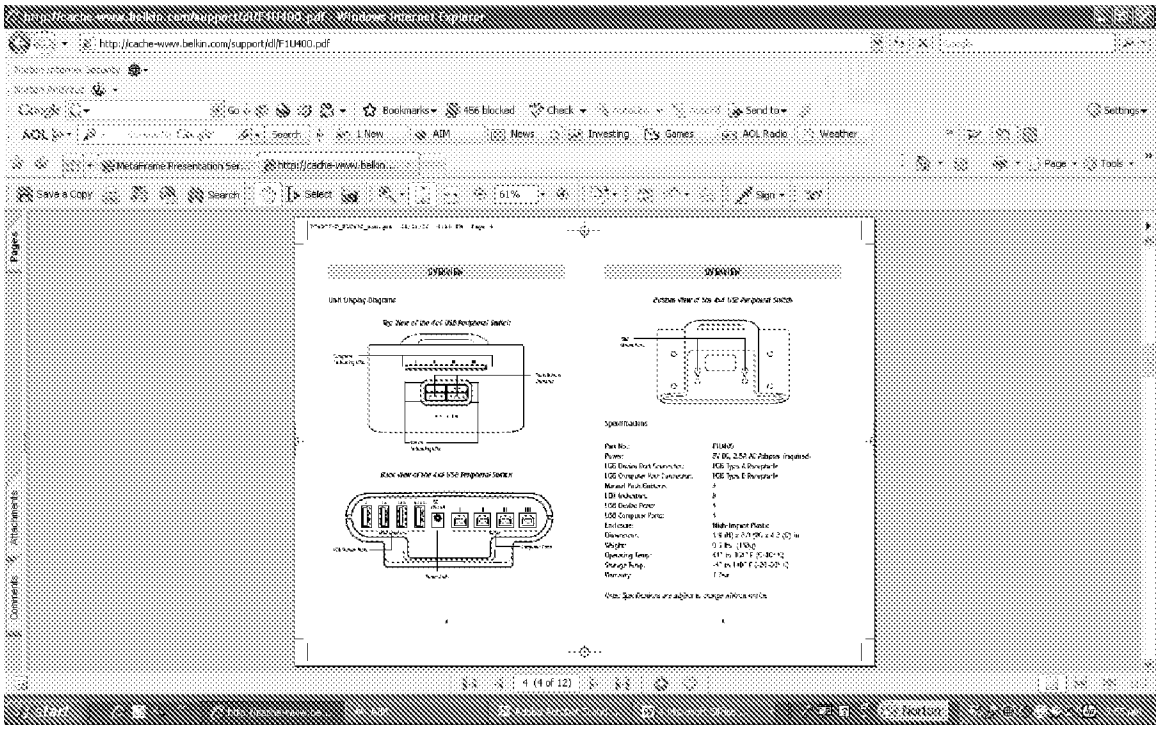
http://cache-www.belkin.com/support/dl/F1U400.pdf
Unit Display Diagram
Top View of the 4x1 USB Peripheral Switch
Back View of the 4x1 USB Peripheral Switch
Bottom View of the 4x1 USB Peripheral Switch
Specifications
Part No. F1U400
Power DC 5V, 2.5A AC Adapter (required)
USB Device Port Connection PDB Type A Receptacle
USB Computer Port Connection PDB Type B Receptacle
Manual Push Buttons 4
LED Indicators 4
USB Device Ports 4
USB Computer Ports 1
Enclosure Matte Impact Plastic
Weight 0.6 lbs. (.3kg)
Operating Temp. 41° to 104°F (5-40°C)
Storage Temp. -4° to 140°F (-20-60°C)
Warranty 1 Year
Note: Specifications are subject to change without notice.
4 (4 of 12)

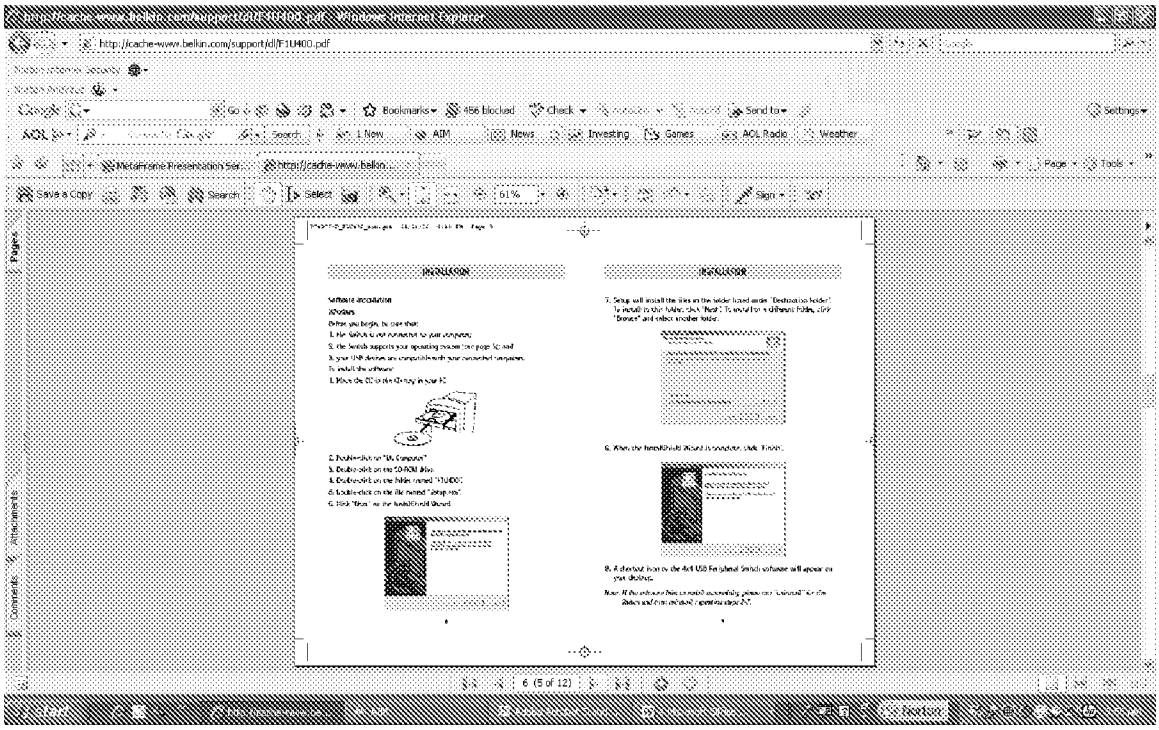
http://cache-www.belkin.com/support/dl/F1U400.pdf
Bookmarks
456 blocked
Check
Send to
Settings
AOL
Search
1 New
AIM
News
Investing
Games
AOL Radio
Weather
Page
Tools
Save a Copy
Search
Select
61%
Sign
INSTALLATION
INSTALLATION
Software installation
Windows
Before you begin, be sure that:
1. the Switch is not connected to your computer,
2. the Switch supports your operating system (see page 5), and
3. your USB devices are compatible with your connected computers.
To install the software:
1. Place the CD in the CD-ROM drive in your PC.
2. Double-click on "My Computer."
3. Double-click on the CD-ROM drive.
4. Double-click on the folder named "F1U400."
5. Double-click on the file named "Setup.exe."
6. Click "Next" on the InstallShield Wizard.
7. Setup will install the files on the folder listed under "Destination folder." To install to this folder, click "Next." To install to a different folder, click "Browse" and select another folder.
8. When the InstallShield Wizard is complete, click "Finish."
9. A shortcut icon to the 4-Port USB Peripheral Switch software will appear on your desktop.
Note: If the software files are copied successfully, please see "Connecting the Switch and the Devices" on page 7.
Pages
Attachments
Comments
6 (5 of 12)
Norton

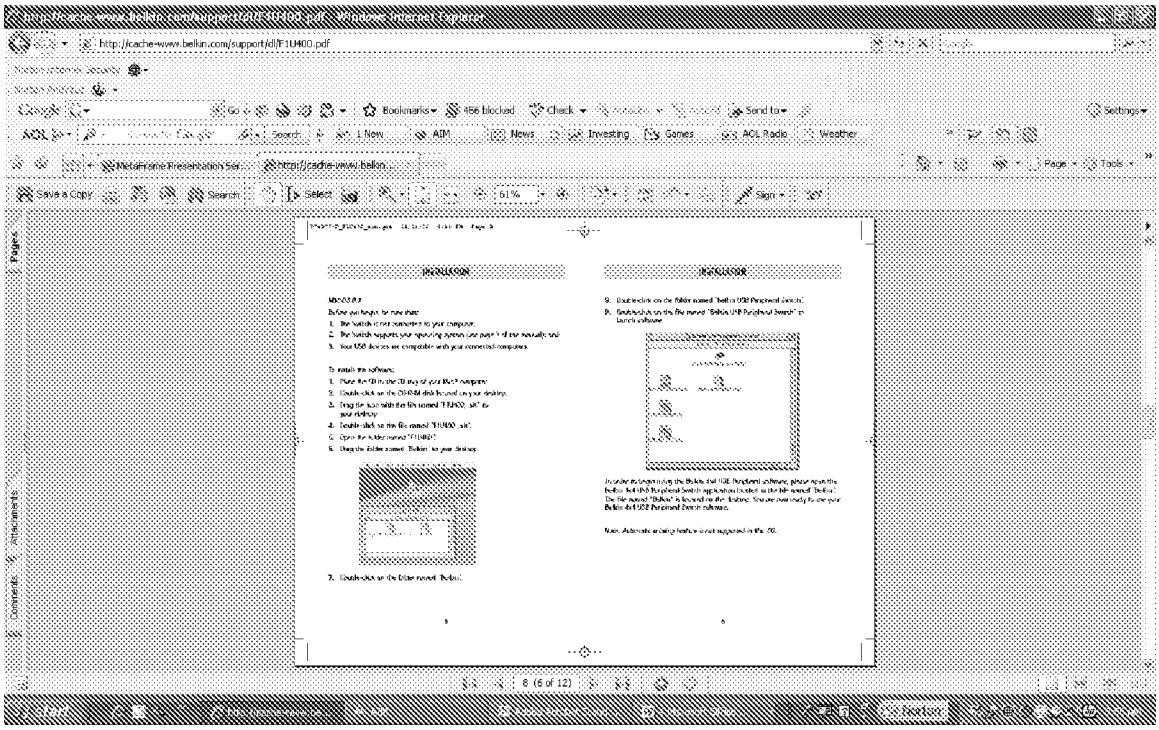
http://cache-www.belkin.com/support/dl/F1U400.pdf
Bookmarks
456 blocked
Check
Send to
Settings
Search
1 New
AIM
News
Investing
Games
AOL Radio
Weather
Page
Tools
Save a Copy
Search
Select
61%
Sign
INSTALLATION
INSTALLATION
Before you begin, be sure that:
1. The Switch is not connected to your computer.
2. The Switch supports your operating system (see page 1 of the manual) and
3. Your USB devices are compatible with your connected computers.
To install the software:
1. Place the CD in the CD tray of your Mac® computer.
2. Double-click on the CD-ROM disk located on your desktop.
3. Drag the icon titled the file named "F1U400.sit" to
your desktop.
4. Double-click on the file named "F1U400.sit".
5. Open the folder named "F1U400".
6. Drag the folder named "Belkin" to your Desktop.
7. Double-click on the folder named "Belkin".
9. Double-click on the folder named "Belkin USB Peripheral Switch".
10. Double-click on the file named "Belkin USB Peripheral Switch" to
launch software
In order to begin using the Belkin 4x4 USB Peripheral software, please open the
Belkin 4x4 USB Peripheral Switch application located in the folder named "Belkin".
The file named "Belkin" is located in the "Extras". Now you are ready to use your
Belkin 4x4 USB Peripheral Switch software.
Note: Automatic scaling feature is not supported in Mac OS.
8 (6 of 12)
Norton

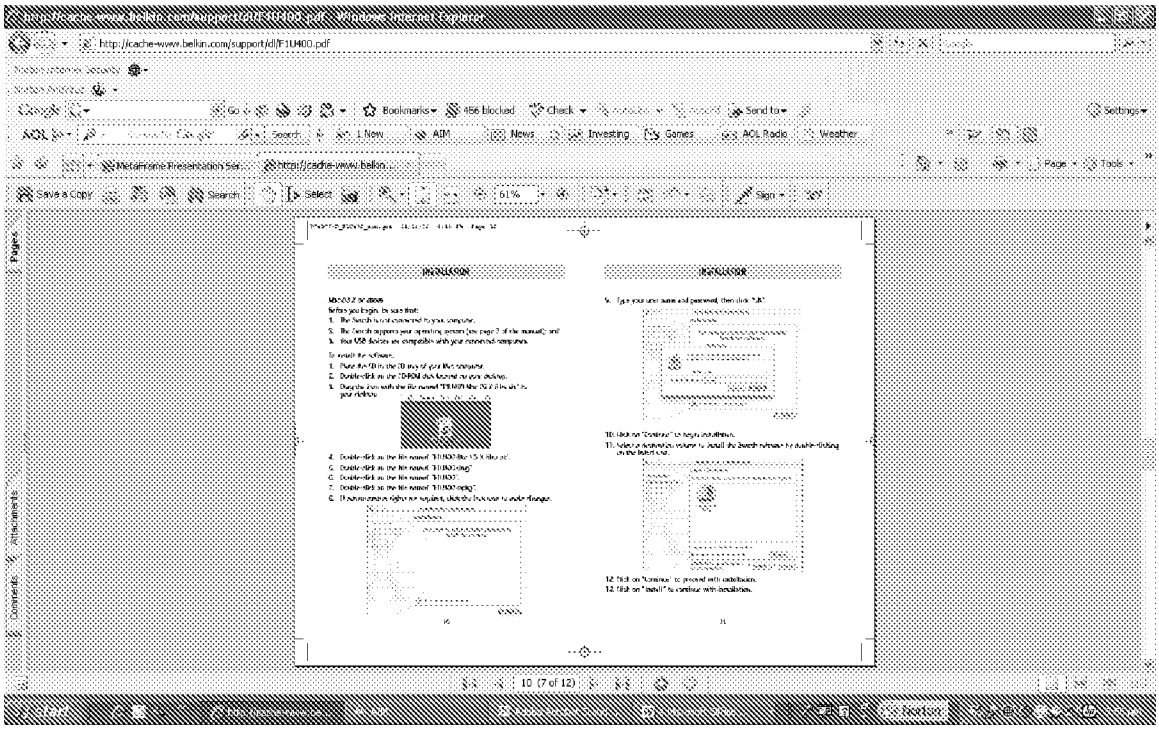

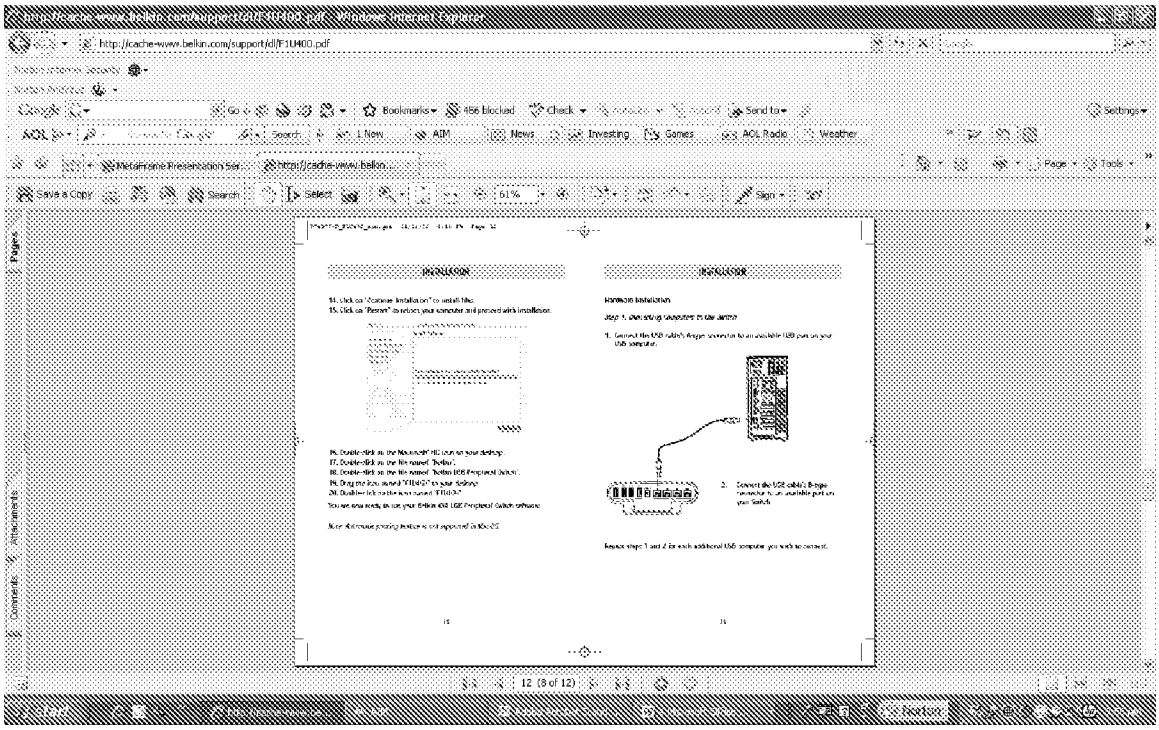
http://cache-www.belkin.com/support/dl/F1U400.pdf
INSTALLATION
INSTALLATION
15. Click on 'Continue Installation' to install files.
16. Click on 'Restart' to restart your computer and proceed with installation.
17. Double-click on the file named 'Belkin'.
18. Double-click on the file named 'Belkin USB Peripheral Switch'.
19. Drag the icon named 'F1U400' to your desktop.
20. Double-click on the icon named 'F1U400'.
You are now ready to use your Belkin 4x4 USB Peripheral Switch software.
Note: Automatic pointing feature is not supported in Mac OS
Hardware Installation
Step 1. Connecting computers to the switch
1. Connect the USB cable's B-type connector to an available USB port on your USB computer.
2. Connect the USB cable's B-type connector to an available port on your Switch.
Repeat steps 1 and 2 for each additional USB computer you wish to connect.
15
16
12 (8 of 12)

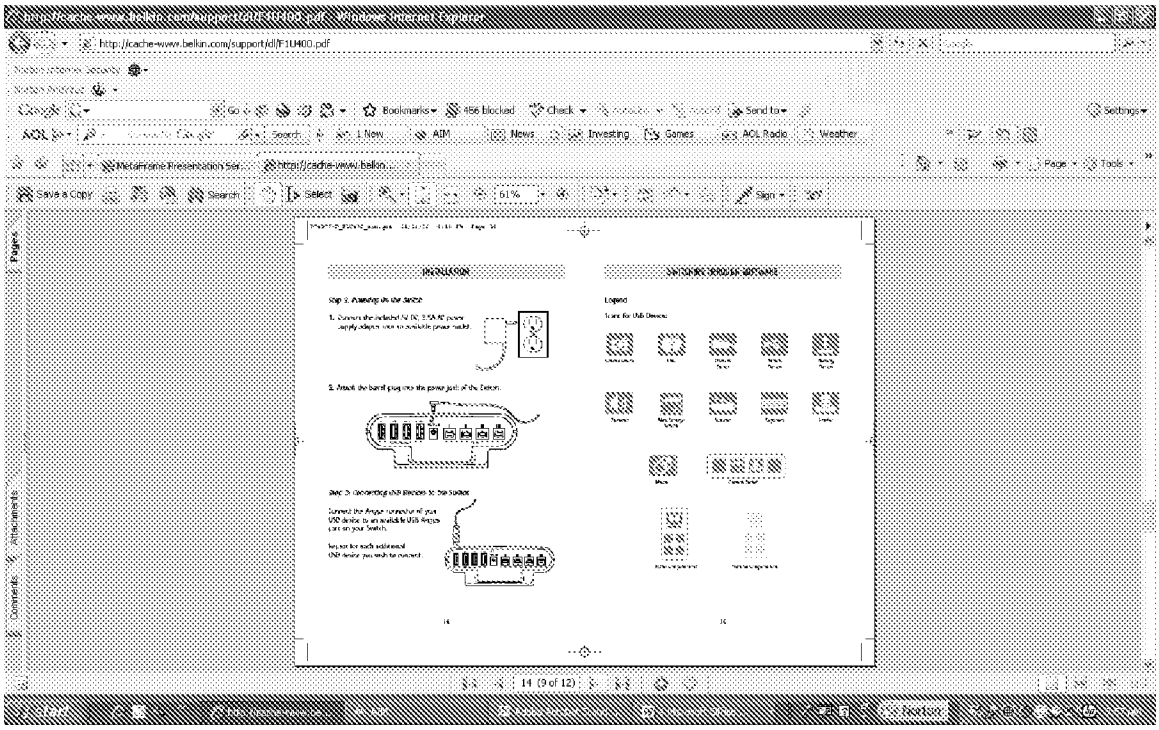

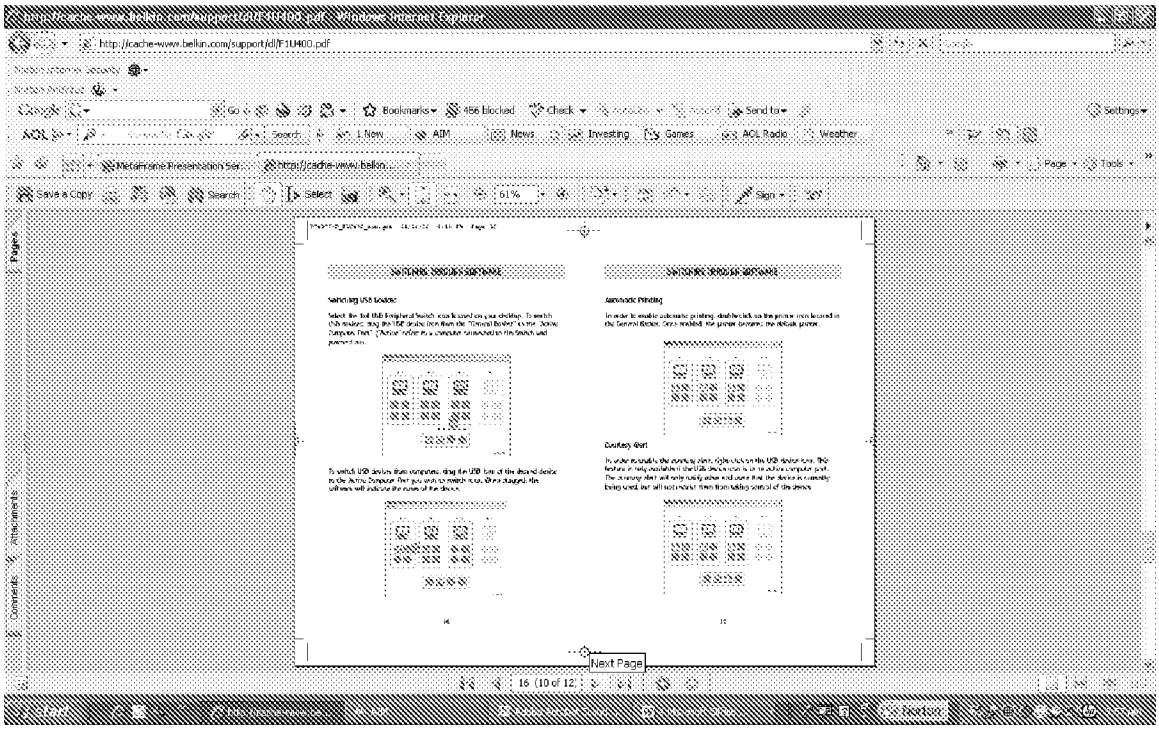
http://cache-www.belkin.com/support/dl/F1U400.pdf
Switching USB Loads:
Automatic Printing
Courtesy Alert
Next Page

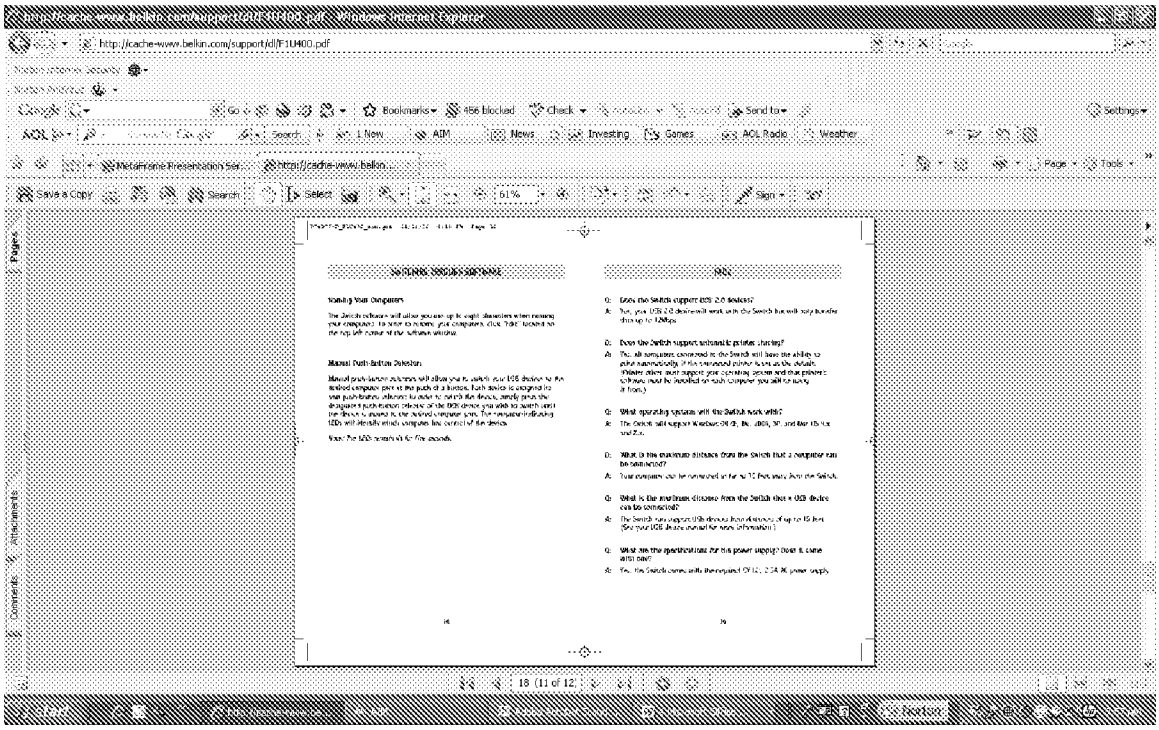
http://icache-www.belkin.com/support/dl/F1U400.pdf
Bookmarks
456 blocked
Check
Send to
Settings
AOL
Search
1 New
AIM
News
Investing
Games
AOL Radio
Weather
Page
Tools
Save a Copy
Search
Select
61%
Sign
Pages
Attachments
Comments
18 (11 of 12)
Norton

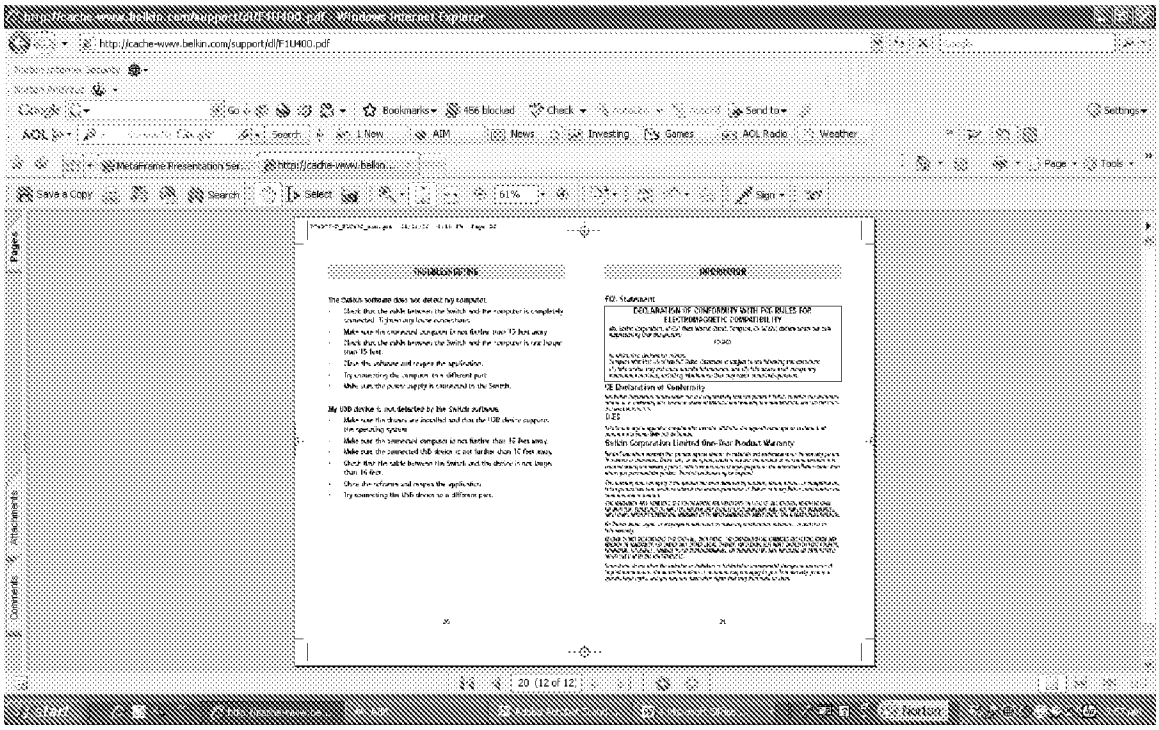
http://icache-www.belkin.com/support/dl/F1U400.pdf
Bookmarks
456 blocked
Check
Send to
Settings
Search
1 New
AIM
News
Investing
Games
AOL Radio
Weather
Page
Tools
Save a Copy
Search
Select
61%
Sign
Pages
Attachments
Comments
20 (12 of 12)
Norton